


Assembly & Installation Instructions

2.1 : SORBETTI FREESTANDING BASE

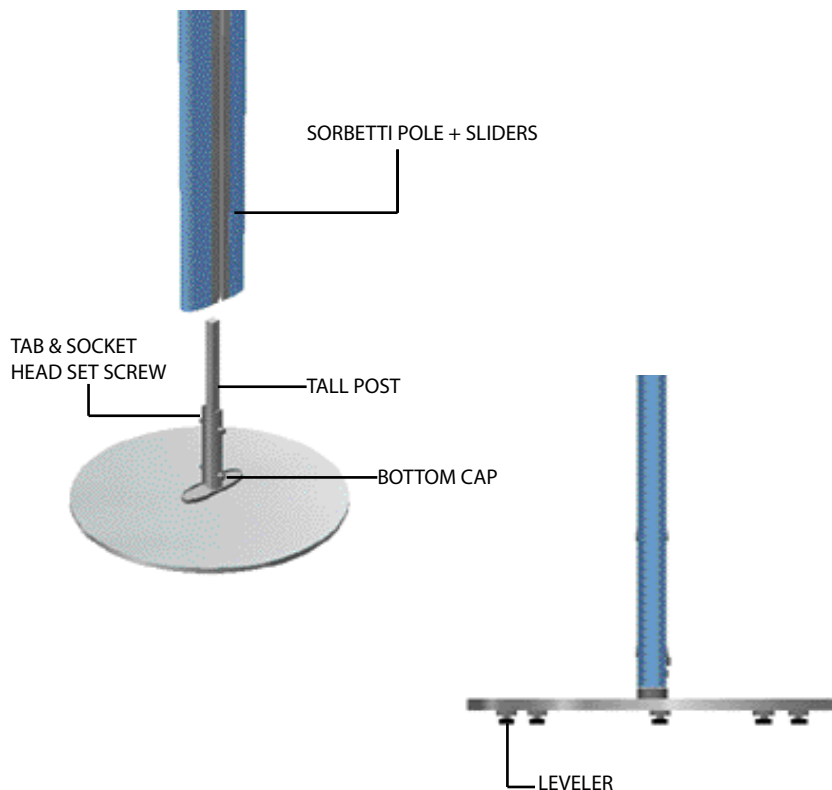

PARTS NEEDED

SORBETTI UPRIGHT AND SLIDERS (OPTIONAL)
SORBETTI BASE
ALUMINUM TOP & BOTTOM CAP (OPTIONAL)
5/32 ALLEN WRENCH (INCLUDED)

STEP 1

BASES ARE PACKED ONE PER BOX. PLACE BASE ON FLOOR AND USE ALLEN WRENCH TO LOOSEN THE FOUR SOCKET-HEAD SCREWS LOCATED ON THE BASE STRAPS. IF A BOTTOM CAP IS TO BE USED. PLACE CAP OVER POST ON BASE SO THAT WALLS OF CAP POINT UP AS SHOWN.

STEP 2 (OPTIONAL ITEMS)

IF INCLUDED, ATTACH SLIDER ONTO POLE BY SLIDING THE "T" SHAPE ON THE BACK OF THE SLIDER DOWN POLE IN ONE OF THE FOUR CHANNELS. REPEAT IN CHANNEL ON OPPOSITE SIDE. PLACE THE TOP CAP SECURELY ON TOP OF POLE AND INSERT BLACK PLASTIC PLUG THROUGH HOLE TO SECURE TOP CAP IN PLACE.

STEP 3

IF BOTTOM CAP IS BEING USED, PUT BOTTOM CAP ON BASE NOW. SLIDE THE SORBETTI EXTRUSION ASSEMBLY COMPLETELY ONTO THE TALL POST ON CENTER OF BASE. BE SURE THE TWO SMALLER TABS OF THE BASE INSERT FULLY INTO THE OPEN CHANNELS OF THE EXTRUSION AND BOTTOM CAP FITS SNUGLY INTO POLE AND SLIDERS.

STEP 4

LOCK EXTRUSION INTO PLACE BY TIGHTENING ALL FOUR SET SCREWS ON THE BASE TABS. USE INCLUDED ALLEN WRENCH TO TIGHTEN BOLTS SECURELY.

STEP 5

ADJUST LEVELERS ON BOTTOM OF BASE AS REQUIRED.

APPROVED
By dwilliams at 7:35 am, Jul 27, 2010



B&N INDUSTRIES
650.593.4127
WWW.BNIND.COM