




# Assembly & Installation Instructions

## 2.3 : SORBETTI SPANNING SIGNAGE

### 1 Measure

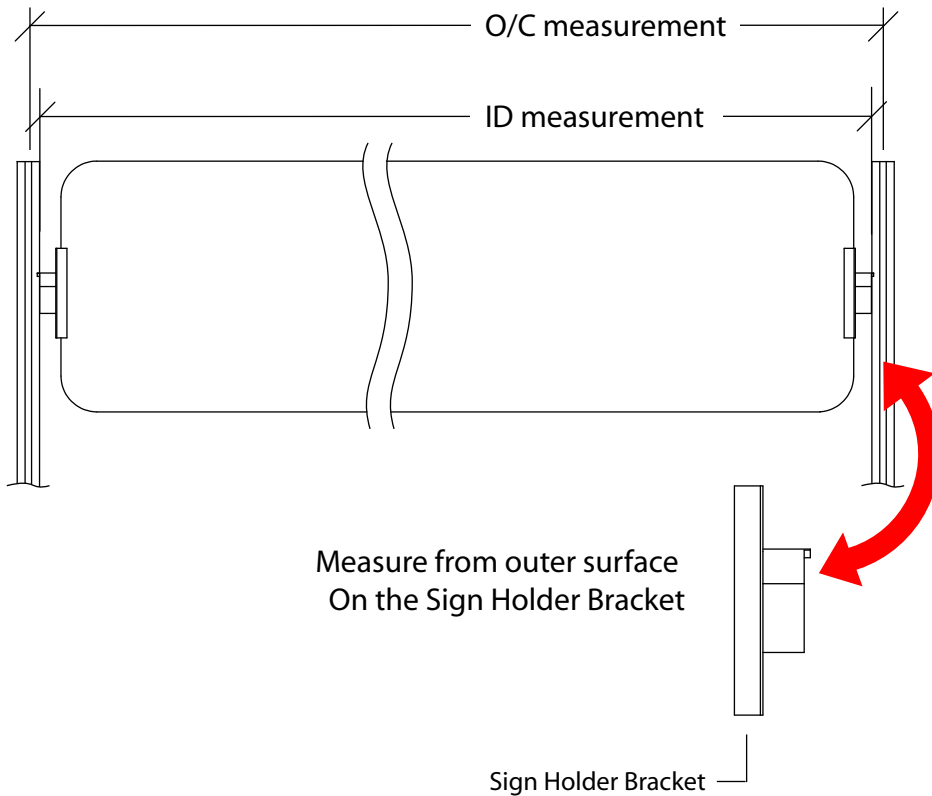

### 2 Attach

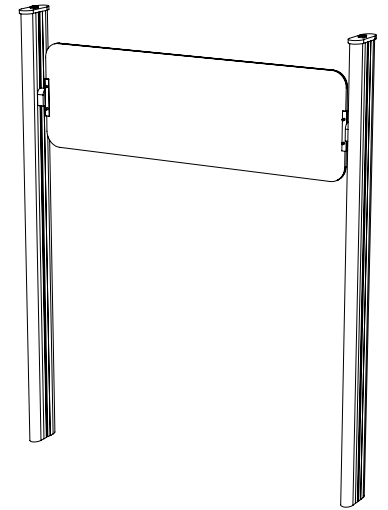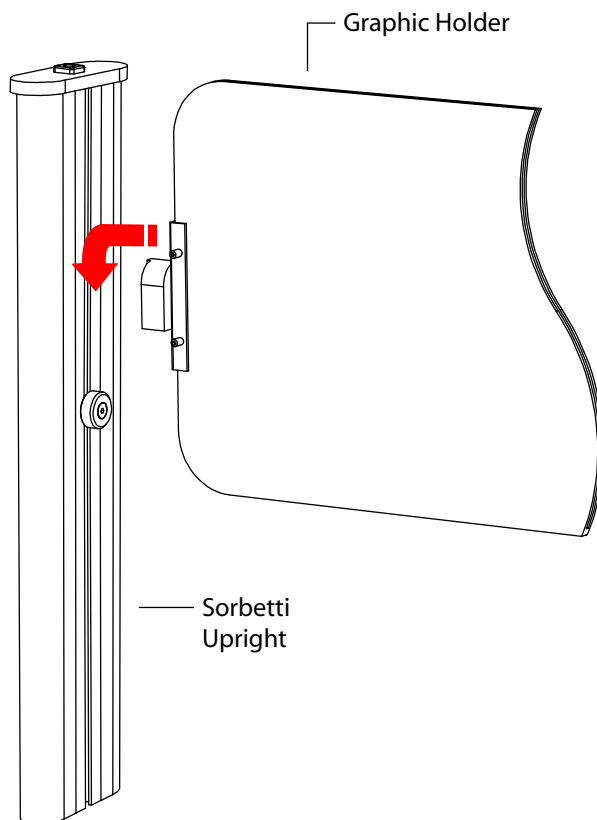

### Sorbetti Sign Installation

1. Measure - Panel width will determine the overall pole placement. Attach both Sign Holder Brackets to the Graphic holder. Measure from the outside surface of the Sign Holder Bracket. The inside surface of the Sorbetti Upright pole should mirror this measurement for proper installation.

2. Attach- Place Puck in desired location on Sorbetti Upright Pole. The Sign Holder bracket sits on top of the Puck component. You can adjust the sign height by moving the puck higher or lower on the Sorbetti Pole.

Note:

Typical Upright 'on/center' measurements:

24" o/c Upright = 22 15/16" ID

36" o/c Upright = 34 15/16" ID

48" o/c Upright = 46 15/16" ID

APPROVED  
By dwilliams at 7:48 am, Jul 27, 2010



B&N INDUSTRIES  
650.593.4127  
WWW.BNIND.COM