


Assembly & Installation Instructions

- ① Measure Graphic Signholder


Graphic Signholder

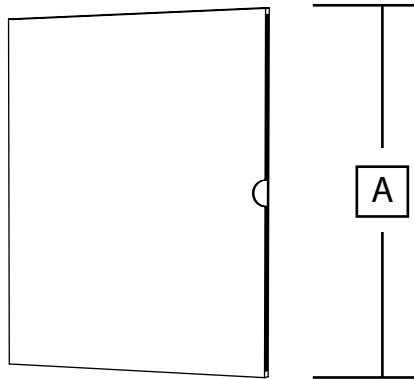


- ② Attach Pucks

- ③ Attach Signholder Brackets

- ④ Attach Graphic Signholder

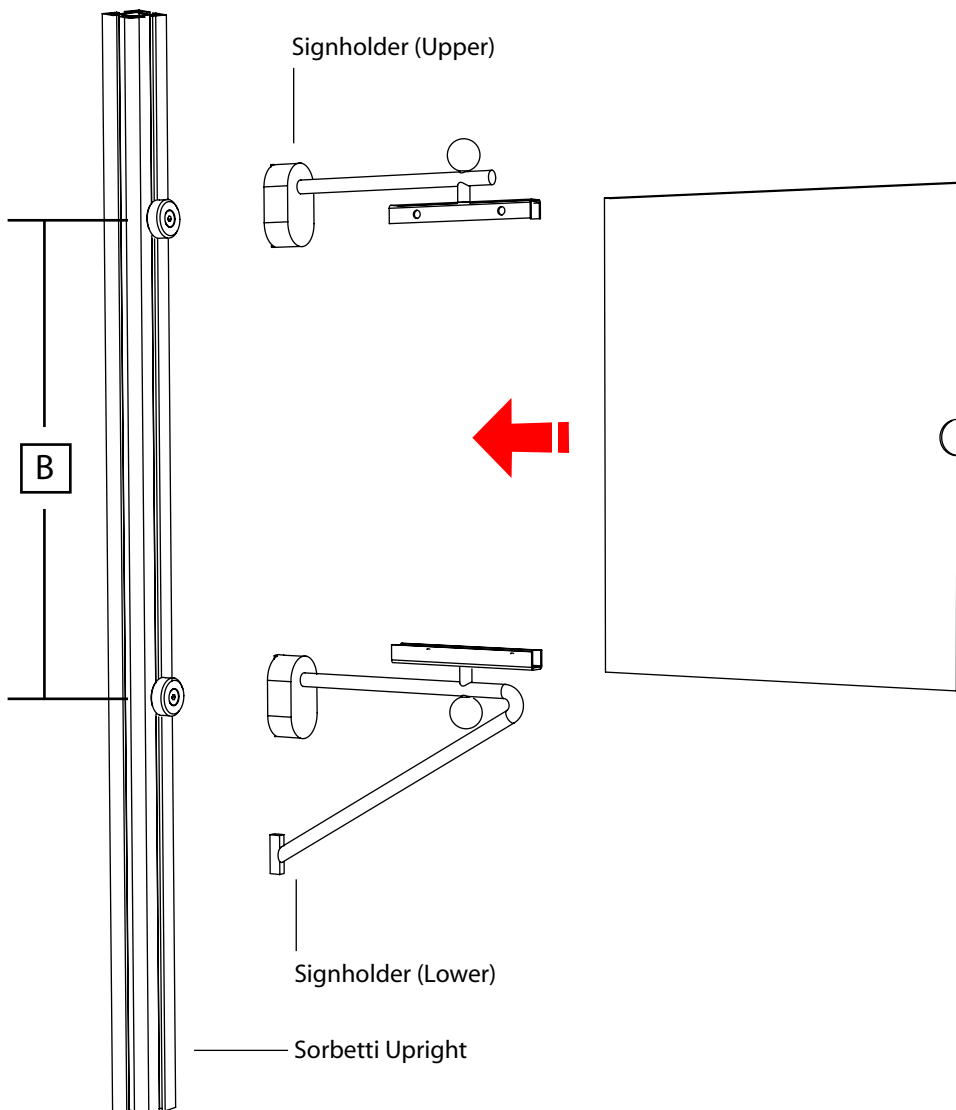

2.5 : SIGNAGE OFF SORBETTI

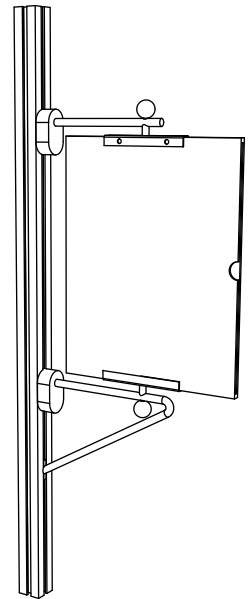

Sorbetti Signholder Set-up

1. Measure- height of the GRAPHIC SIGNHOLDER.

$$\boxed{A} = \text{Height of SignHolder}$$

$$\boxed{A} + 1.75" = \boxed{B}$$

2. Attach- Upper PUCK onto UPRIGHT at height equal to desired height of top of sign holder. (See separate installation instructions for PUCK attachment.) Attach Lower PUCK onto UPRIGHT at a distance equal to \boxed{B} (center to center).

3. Attach both SIGNHOLDER BRACKETS. (See separate installation instructions for Accessory Bracket attachment.)

4. Place GRAPHIC SIGNHOLDER within the channel of the SIGNHOLDER BRACKETS. Tighten set-screws (provided) on SIGNHOLDER BRACKETS until the SIGNHOLDER is held firmly in place.

APPROVED
By dwilliams at 7:43 am, Jul 27, 2010



B&N INDUSTRIES
650.593.4127
WWW.BNIND.COM