



Assembly & Installation Instructions

2.8 : SORBETTI SPANNING CHANNEL


1 Set-up

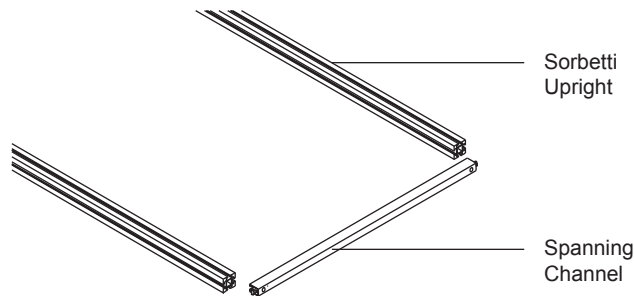



2 Align & Insert

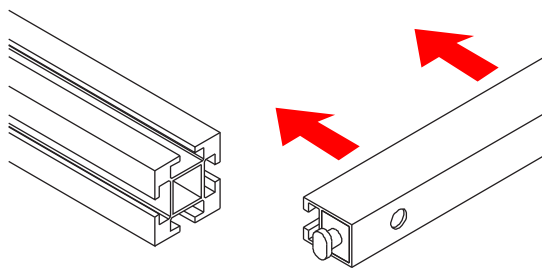

3 Tighten

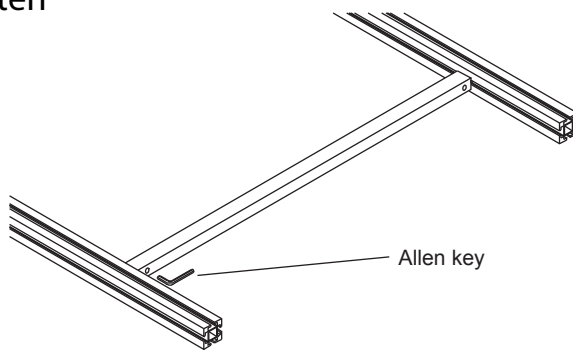

4 Insert panel

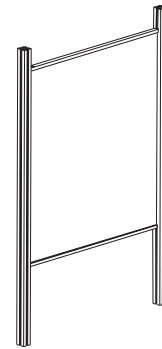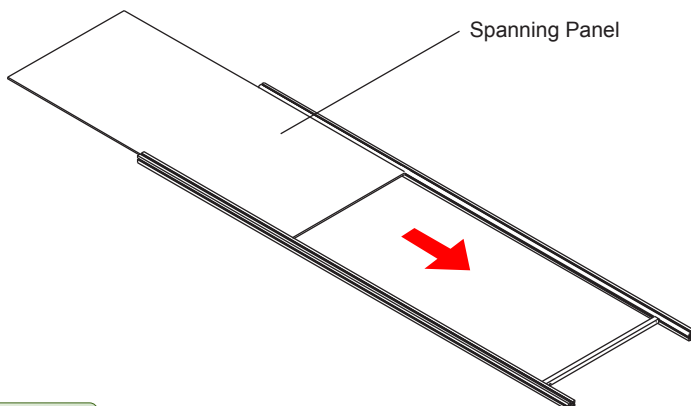

Single Spanning Channel Assembly

1. Begin by laying the Sorbetti Uprights on the ground parallel to each other.
2. Take the Spanning Channel and position it so that the face with the slot is facing towards the extrusions. Slide the Spanning Channel into the upright channels.
3. Once in position, tighten in place using the provided allen key. Be sure to tighten both ends of the Spanning Channel.
4. Slide the panel into the extrusion from the opposite end.
5. Finally, slide the 2nd Spanning Channel (not shown) into the SORBETTI UPRIGHT, capping off the remaining edge of the PANEL. Tighten Spanning Channel.

Note: If you have any Sorbetti accessories, such as Sliders and, or, top/bottom caps it is recommended to install these items before you mount the entire Spanning Channel Assembly to a wall or onto a base.