



Assembly & Installation Instructions

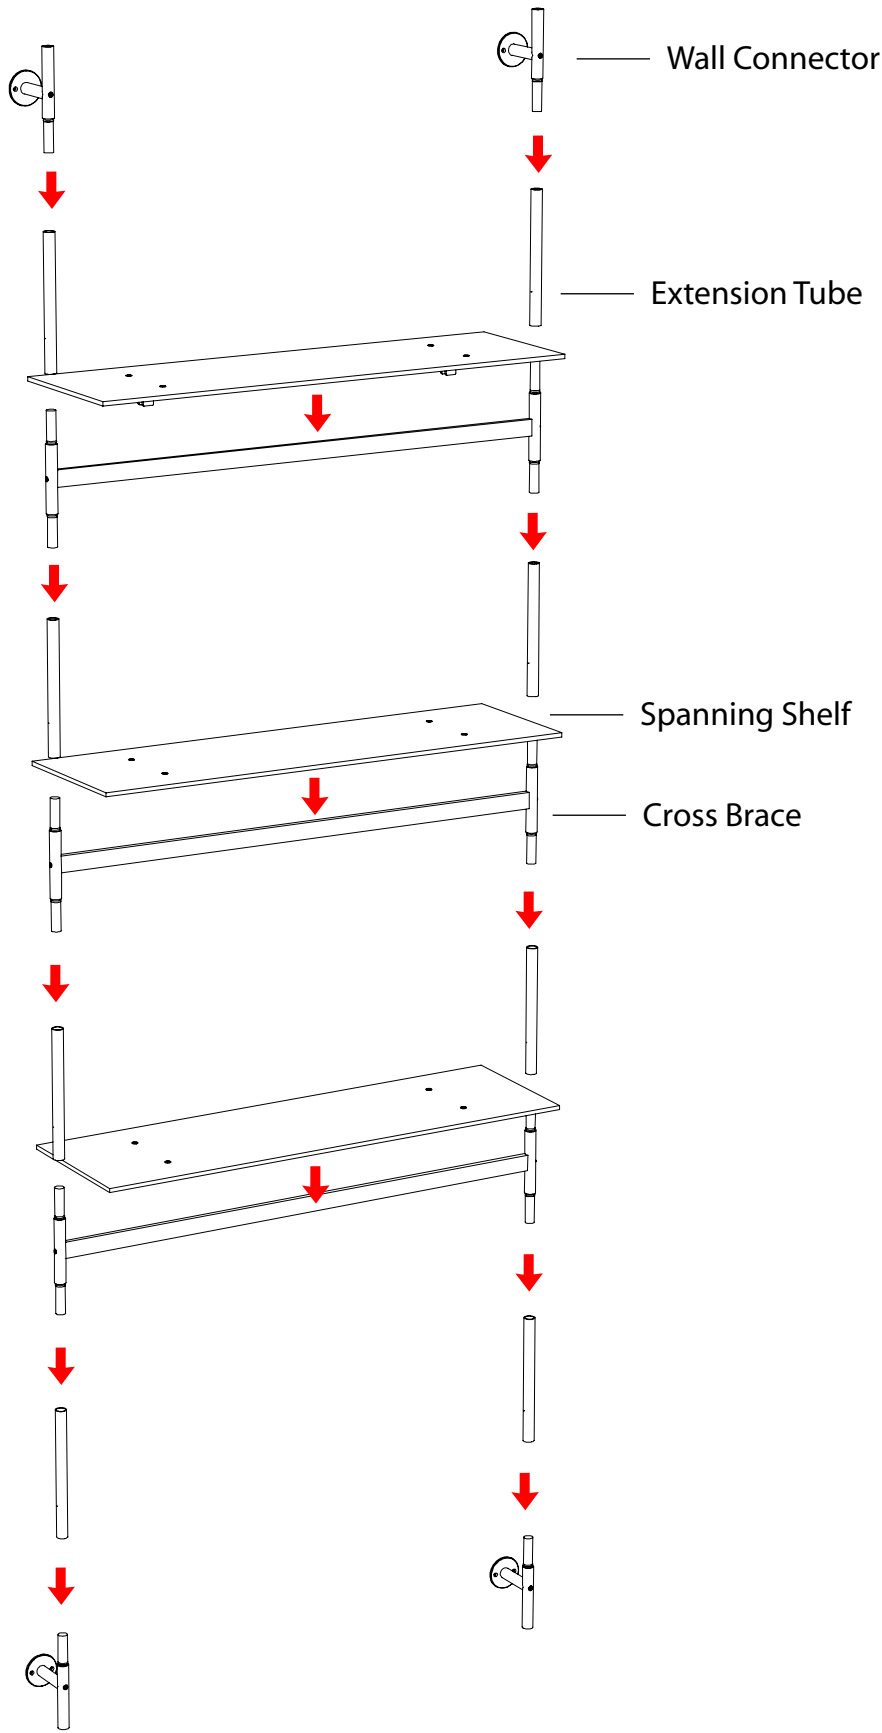

3.2 : PERIMETER BASIC SCISSY

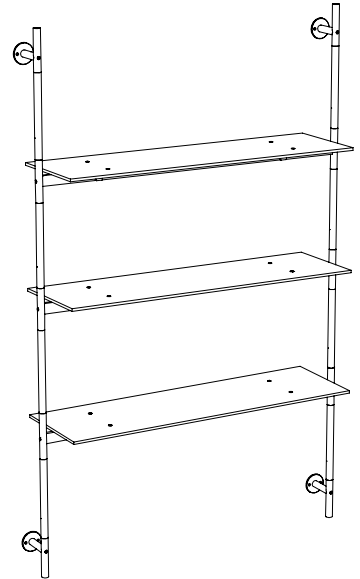

Scissy System Installation

All SCISSY & MINI SCISSY components are attached together simply by inserting the male end of the connector into the Cross Brace or Extension Tube until the components are flush.

Shelving rests on the Cross Brace, positioning the cross brace between the bottom shelving bracket, then tightening the set screws in the bracket. A 3mm Allen Key will be provided.

NOTE: It is generally easier to begin assembly starting from the bottom.

After all structural components are assembled make sure to insert the plastic feet (included) into the bottom of the Cross Brace(s) and (or) Extension Feet.

APPROVED
By dwilliams at 9:05 am, Jul 27, 2010



B&N INDUSTRIES
650.593.4127
WWW.BNIND.COM