


# Assembly & Installation Instructions

## 6.2 : ECONOMINI FLOOR TO CEILING

APPROVED  
By dwilliams at 8:39 am, Jun 22, 2010

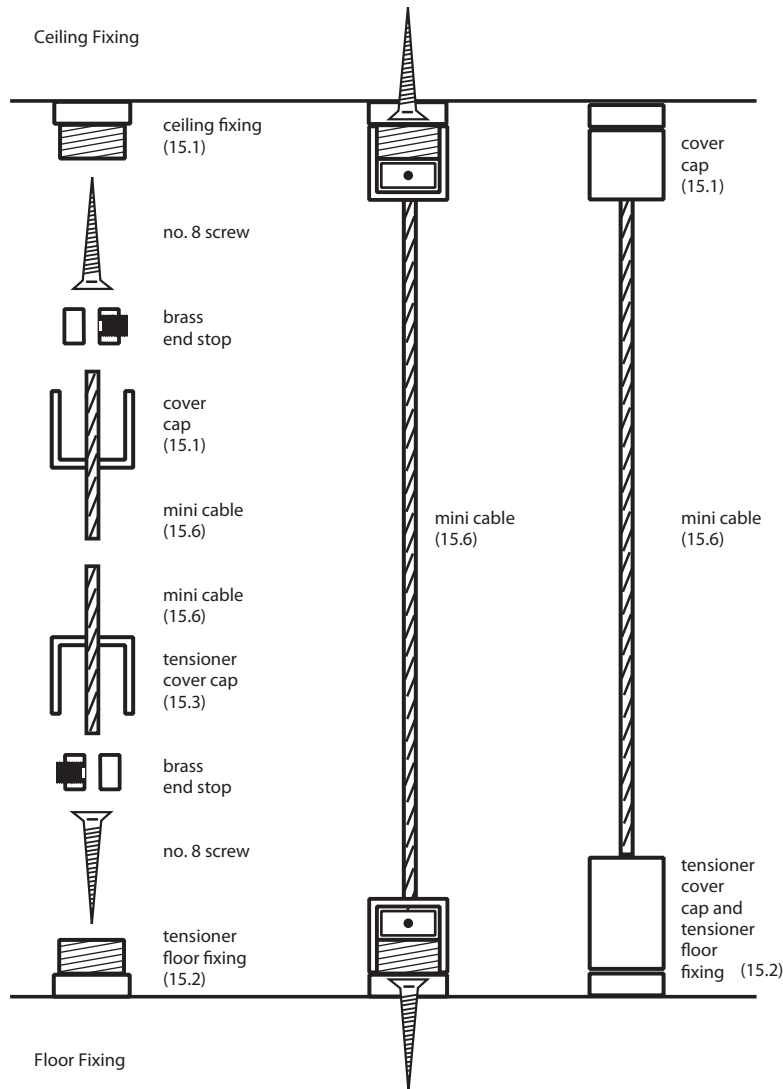

### STEP 1:

CUT CABLE TO REQUIRED LENGTH LESS 13/16" FOR TENSIONERS. SECURE CEILING FIXING (15.1) IN POSITION USING NO. 8 SCREWS (BY OTHERS). CEILING FIXING NEED TO BE ATTACHED TO BLOCKING.

### STEP 2:

THREAD CABLE THROUGH COVER CAP. FIX BRASS END STOP TO END OF CABLE - TIGHTEN SECURELY - USING ALLEN KEY PROVIDED. SCREW COVER CAP TO CEILING FIXTUR (15.1).

### STEP 3:

PLACE TENSIONER FLOOR FIXING (15.2) IN POSITION. SECURE TO FLOOR USING NO. 8 SCREWS (BY OTHERS).

### STEP 4:

THREAD BOTTOM END OF CABLE THROUGH TENSIONER COVER CAP. FIX BRASS END STOP TO END OF CABLE - TIGHTEN SECURELY - USING ALLEN KEY PROVIDED. SCREW TENSIONER COVER CAP TO TENSIONER FLOOR FIXING (15.2) UNTIL CABLE IS TAUT.

PLEASE NOTE: DO NOT OVER TIGHTEN PICTURE PANEL OR SHELF GRIPS AS THIS MAY DAMAGE CABLE.

IT IS IMPORTANT TO ADD ADEQUATE BLOCKING TO HOLD DESIRED DISPLAY WEIGHT LOADS. QUESTIONS? PLEASE CONTACT YOUR B&N REPRESENTATIVE.



B&N INDUSTRIES  
650.593.4127  
WWW.BNIND.COM