



Assembly & Installation Instructions

QUADRI: 9.1 WALL CLEATS




Attach Quadri wall cleats using the correct screws for your wall application. (screws not provided by B+N)

Align them parallel to one another and level with the ground. The measurement from outside cleat to outside cleat should not exceed the inner dimension of the frame.

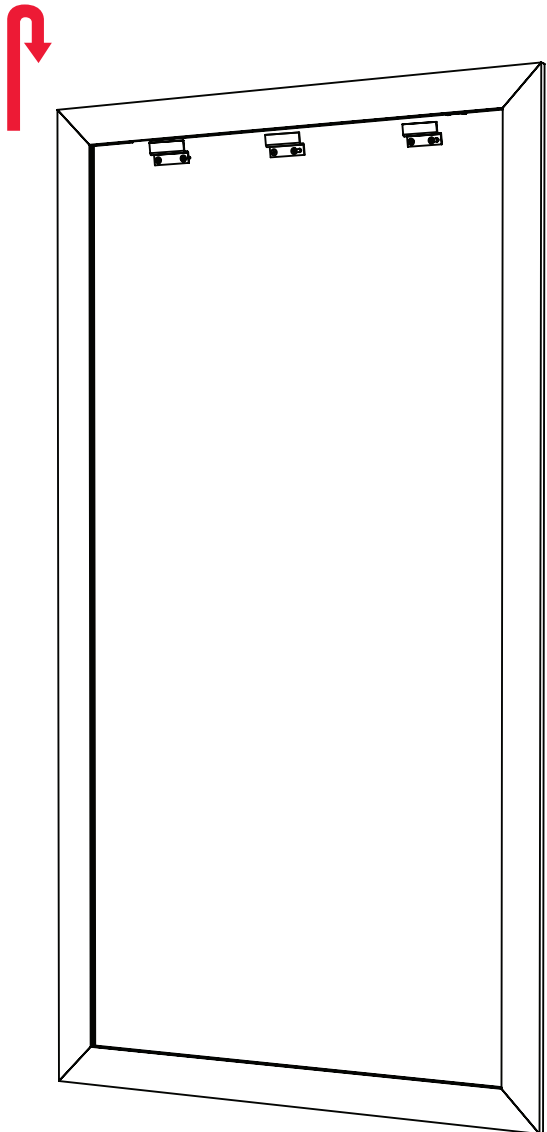

Once all supplied cleats are installed, lift the frame and "hook" it into the cleats. Make sure the graphic is already inserted in the Frame. The cleat should sit between the back of the graphic and the inner wall of the frame. This installation can be used for vertical or horizontal applications.

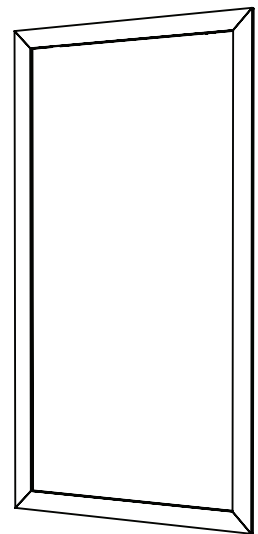

APPROVED
By dwilliams at 4:36 pm, Nov 04, 2010



B&N INDUSTRIES
650.593.4127
WWW.BNIND.COM